

PT PLANETÁRIOS DISCOVERY STAR SKY P5/P7

Não olhe diretamente para a fonte de luz com o dispositivo ligado. Isso pode causar DANOS PERMANENTES na RETINA e levar à CEGUEIRA. As crianças só devem utilizar o dispositivo sob a supervisão de um adulto.

Montagem

Remova a película protetora das peças do planetário. Dobre as peças intermédia e inferior da esfera e fixe-as para que ganhem forma como mostrado na Fig. 2. Encaixe as peças superior, intermédia e inferior entre si e fixe-as [Fig. 2]. Insira a base da esfera e aperte-a firmemente [Fig. 3]. Em seguida, monte a esfera na base do planetário [Fig. 4].

Iniciação

Instale baterias no controlo remoto [apenas para o Discovery Star Sky P7]. Ligue o cabo de alimentação ao dispositivo e ao adaptador CC [não incluído] através de uma ficha USB e depois ligue-o à fonte de alimentação CA. **Atenção!** O dispositivo funciona a partir da fonte de alimentação CA, pois a tensão da porta USB do computador não é suficiente para o bom funcionamento do dispositivo.

O Discovery Star Sky P7 está equipado com uma bateria embutida e pode funcionar de forma autónoma. O tempo de funcionamento com carga total é de até 12 horas no modo de três LED. O tempo aproximado de carregamento é de 3 a 4 horas. Quando a bateria estiver totalmente carregada, o indicador [4, Fig. 6] mudará de vermelho para verde.

Atenção! Lembre-se que a voltagem na maioria dos países europeus é 220–240 V. Se você quiser usar seu dispositivo em um país com voltagem padrão diferente, lembre-se que o uso de um transformador é absolutamente necessário.

Utilização

Escolha o lugar certo para projetar uma imagem: um teto ou parede branca dará o melhor efeito. A distância ideal do planetário é de aproximadamente 1,5–2 m. Coloque o dispositivo sobre uma superfície plana. Desligue a luz e feche as cortinas para escurecer o quarto. Aguarde 5 a 10 minutos para que os seus olhos se adaptem à escuridão. Ligue o dispositivo e escolha o modo de projeção pretendido.

Para ligar ou desligar o planetário, prima o botão no corpo do dispositivo [1, Fig. 6] ou use as teclas [1] e [2] do controlo remoto [Fig. 5] [apenas para o P7].

Prima o botão do corpo do dispositivo durante 1,5 seg. para alterar a cor da luz. Ao utilizar o controlo remoto, certifique-se de que está apontado para o sensor infravermelho do astroplanetário [2, Fig. 6].

Rotação [somente para o P7]. Para iniciar a rotação do planetário, prima a tecla [9] do controlo remoto [Fig. 5].

Especificações

	Discovery Star Sky P5	Discovery Star Sky P7
Fonte de alimentação	MicroUSB 5V, 1A	lões de íonio, 18650 1500 mAh tempo de funcionamento: 6–12 h, tempo de carregamento: 3–4 h
Controlo remoto	—	+ [1 bateria CR2025, não incluída]
Temporizador	—	+
Área de projeção	—	12 m ²

Cuidado e manutenção

O dispositivo é adequado apenas para uso em espaços fechados. O dispositivo não é à prova de água. Para limpar a superfície do dispositivo, desligue-o da tomada. Use apenas um pano seco e macio para o limpar. Siga rigorosamente as instruções e não desmonte ou deixe cair o dispositivo, pois pode deixar de funcionar.

Garantia: 2 anos. Para detalhes adicionais, visite nossa página na internet: www.levenhuk.eu/warranty

O fabricante se reserva no direito de fazer alterações na variedade e nas especificações dos produtos sem notificação prévia.

RU АСТРОПЛАНЕТАРИЙ DISCOVERY STAR SKY P5/P7

Не смотрите на источник света, когда прибор включен. Это может привести к необратимому повреждению глаз, вплоть до слепоты. Дети должны пользоваться прибором только под присмотром взрослых.

Сборка

Освободите части астропланетария от защитной пленки. Сложите среднюю и нижнюю части сферы и закрепите их, чтобы они приняли форму, как показано на рис. 2. Соберите верхнюю, среднюю и нижнюю части вместе и закрепите их [рис. 2]. Вставьте основание сферы и плотно закрепите его [рис.3]. Затем установите сферу на основание астропланетария [рис. 4].

Начало работы

Установите батарейки в пульт управления [только для модели Discovery Star Sky P7]. Подсоедините кабель питания к прибору и сетевому адаптеру [нет в комплекте] через USB-штекер, включите в сеть. **Внимание!** Прибор работает от сети, напряжение USB-порта компьютера недостаточно для корректной работы устройства.

Модель Discovery Star Sky P7 оснащена встроенным аккумулятором и может работать автономно. Время работы после полной зарядки батареи составляет до 12 ч при работе одного светодиода, до 6 ч — при работе трех светодиодов. Приблизительное время полного заряда аккумулятора: 3–4 часа. Когда аккумулятор зарядится, индикатор [4, Fig. 6] сменится с красного на зеленый.



Внимание! Помните, что напряжение сети в России и большинстве европейских стран составляет 220–240 В. Если вы хотите использовать устройство в стране с другим стандартом сетевого напряжения, необходимо включить его в розетку только через соответствующий конвертер [преобразователь напряжения].



Внимание! Помните, что напряжение сети в России и большинстве европейских стран составляет 220–240 В. Если вы хотите использовать устройство в стране с другим стандартом сетевого напряжения, необходимо включить его в розетку только через соответствующий конвертер [преобразователь напряжения].

Использование

Выберите место для проекции: хорошо подойдет светлый потолок или стена. Оптимальное расстояние от астропланетария: 1,5–2 м. Установите прибор на горизонтальную поверхность. Выключите свет и закройте шторы для того, чтобы в помещении стало максимально темно. Подождите 5–10 минут, чтобы глаза привыкли к темноте. Включите питание, настройте нужный режим проекции.

Чтобы включить или выключить астропланетарий, нажмите кнопку [1, Fig. 6] на корпусе, или используйте кнопки [1] и [2] на пульте управления [рис. 5] [только для модели P7]. Нажатие и удержание [1,5 с] кнопки на корпусе позволяет изменить световой режим.

При использовании пульта управления [только для модели P7] убедитесь, что он направлен на инфракрасный сенсор астропланетария [2, Fig. 6].

Функция вращения [доступна только для модели P7]. Чтобы запустить вращение астропланетария, нажмите кнопку [9] на пульте управления [рис. 5].

Технические характеристики

	Discovery Star Sky P5	Discovery Star Sky P7
Питание	microUSB 5 В, 1 А	Li-Ion аккумулятор типа 18650 1500 мАч время работы: 6–12 часов, время зарядки: 3–4 часа; microUSB 5 В, 1 А
Пульт управления	—	+
Таймер	—	+
Площадь проекции	—	12 м ²

Уход и хранение

Прибор подходит только для использования в помещении. Прибор не является водонепроницаемым. Чтобы очистить поверхность прибора, отключите прибор от сети. Для очистки используйте только сухую мягкую салфетку. Стого следуйте инструкции, не разбирайте и не роняйте устройство, это может привести к потере работоспособности.

Гарантия: 2 года. Подробнее об условиях гарантийного обслуживания см. на сайте www.levenhuk.ru/support

Производитель оставляет за собой право вносить любые изменения или прекращать производство изделия без предварительного уведомления.

TR DISCOVERY STAR SKY PLANETARYMLARI P5/P7

Cihaz açığında ışık kaynağına bakmayın. Bu KALICI RETINA HASARI'na neden olabilir ve KÖRLÜK ile sonuçlanabilir. Çocuklar cihazı yalnızca bir yetişkin gözetimi altında kullanabilir.

Montaj

Koruyucu filmi planetaryum parçalarından çıkarın. Kürenin orta ve alt parçalarını katlayın ve Şek. 2'de gösterilen biçimde yapın. Kürenin orta ve alt parçalarını birbirine yerleştirin. Üst, orta ve alt parçalarını birbirine yerleştirin ve sabitleyin [Şek. 2]. Kürenin tabanını takın ve tam kilitleyin [Şek. 3]. Sonra, küreyi planetaryumun tabanına monte edin [Şek. 4].

Başlarken

Piller uzaktan kumandası için tıkaçılmıştır. Cihazı DC adaptörden [dahil değildir] bir USB şıfır ile bağlayın ve AC güç kaynağına tıkaç. **Dikkat!** Cihaz, bilgisayarın USB bağlantı noktası gerekliliği doğru şekilde çalışması için yeterli olduğundan AC güç kaynağı ile çalışır.

Discovery Star Sky P7 osunağına tıkaçtıktan sonra 12 saat ışık modunda 3 saat kadar çalışır. Yaklaşık şarj süresi 3 ila 4 saat. Pil tam şarj olduğunda, şarj 6.5 saat sürer.

Dikkat! Sebebe voltajı birçok Avrupa ülkesinde 220–240 V değerindedir. Cihazınız farklı bir sebebe voltaj standardına sahip bir ülkede kullanacağınız, dönüştürücü kullanmanın kesinlikle gerekliliğini unutmayın.

Kullanım

Görünütü yansıtacak doğru yeri seçin: düz beyaz bir tavan veya duvar en iyi olacaktır. Astro planetaryum'dan en ideal uzaklık yaklaşık 1,5–2 m'dir. Cihazı düz bir yüzeye yerleştirin. Odanın karhartının sağlanması için işigi kapatın, perdeyi çekin. Gözlerinizin karhartı alışmasını sağlamak için 5–10 dakika bekleyin. Güç açılın ve istedığınız yansıtma modunu seçin.

Astro planetaryum açmak veya kapatmak için, cihaz gövdesindeki düğmeye [Şek. 6] basın ya da uzaktan kumandasındaki [Şek. 5] [1] ve [2] düğmeleri kullanın [Yalnızca P7'de].

İşığı değiştirmek için cihaz gövdesindeki düğmeye [1,5 sn süreyle] basılı tutun.

Uzaktan kumandayı kullanın,astro planetaryumun kızıl ötesi sensöründe hedeflenildiğinden emin olun [2, Fig. 6].

Dönüş [Yalnızca P7'de]. Astro planetaryumun dönüsünü başlatmak için, uzaktan kumandasındaki düğmeye [9] basın [Şek. 5].

Teknik Özellikler


	Discovery Star Sky P5	Discovery Star Sky P7
Güç kaynağı	MicroUSB 5 V, 1 A	Li-ion, 18650 1500 mAh çalışma süresi: 6–12 saat, şarj süresi: 3–4 saat MicroUSB 5 V, 1 A
Uzaktan kumanda	—	+
Zamanlayıcı	—	+
Yansıtma alanı	—	12 m ²

Bakım ve onarım

Cihaz yalnızca iç mekan kullanıma uygunudur. Cihaz su geçirmesi değildir. Cihaz yüzeyini temizlemek için cihazı fırıldan çekin. Temizlik için yalnızca kuru, yumuşak bir bez kullanın. Talimatlara sıkı sıkıya uyın, ıslık kaybı ile sonuclarabileceğin cihazı parçalarına ayırmayın ya da düşürmeyin.

Garanti: 2 yıl. Daha ayrıntılı bilgi için web sitemizi ziyaret edebilirsiniz: www.levenhuk.eu/warranty

Üretici, ürün serisinde ve teknik özelliklerinde önceden bildirilmekte bulunmakszızın değişiklik yapma hakkını saklı tutar.

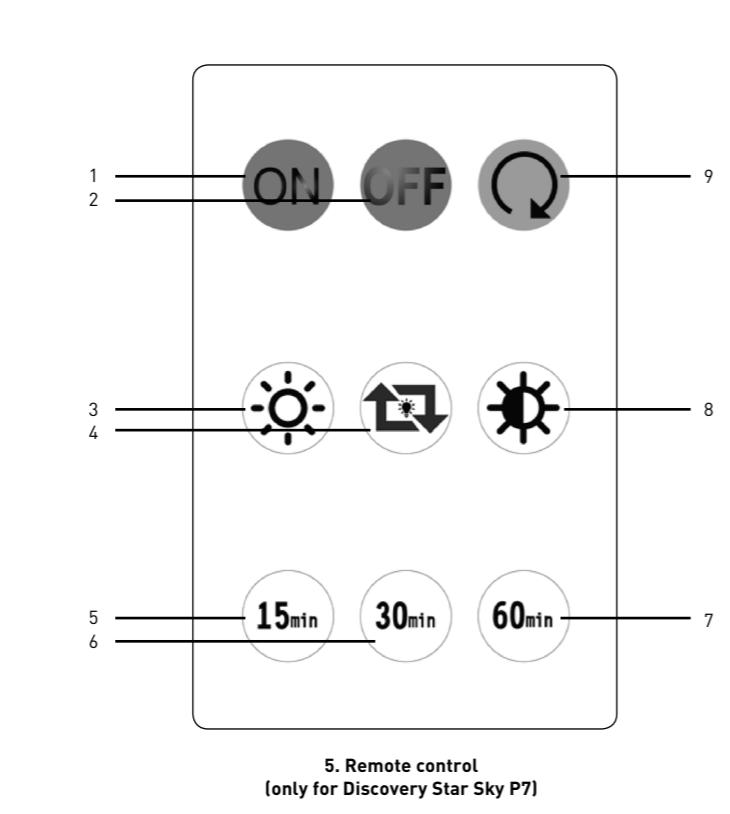

DISCOVERY STAR SKY PLANETARIUM




- EN User Manual
- BG Ръководство за потребителя
- CZ Návod k použití
- DE Bedienungsanleitung
- ES Guía del usuario
- HU Használati útmutató
- IT Guida all'utilizzo
- PL Instrukcja obsługi
- PT Manual do usuário
- RU Инструкция по эксплуатации
- TR Kullanım kılavuzu



© 2022 Discovery or its subsidiaries and affiliates. Discovery and related logos are trademarks of Discovery or its subsidiaries and affiliates, used under license. All rights reserved. Discovery.com

levenhuk.com
Levenhuk Inc. (USA): 928 E 124th Ave. Ste D, Tampa, FL 33612, USA +1 813 468-3001, contact_us@levenhuk.com
Levenhuk Optics s.r.o. (Europe): V Chotejně 700/102, Prague 102, Czech Republic, +420 737-004-919, sales-info@levenhuk.cz
Levenhuk® is registered trademark of Levenhuk, Inc.
© 2006–2022 Levenhuk, Inc. All rights reserved.
20210906

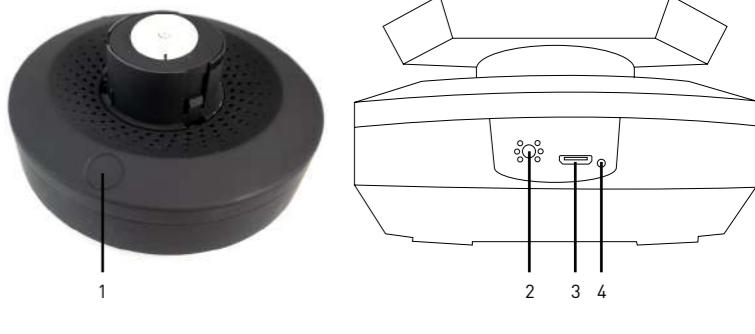

EN	BG	CZ
1. Power on	Vkl. Zapnutí	Zapnutí
2. Power off	Vypnutí	Vypnutí
3. Brightness up	Zvýšení jasu	Změna barev světla
4. Change light color	Změna barev světla	Nastavení časováče na 15 minut
5. Set the timer for 15 minutes	Nastavení časováče na 15 minut	Nastavení časováče na 30 minut
6. Set the timer for 30 minutes	Nastavení časováče na 30 minut	Nastavení časováče na 60 minut
7. Set the timer for 60 minutes	Nastavení časováče na 6	

EN DISCOVERY STAR SKY PLANETARIUM P5/P7

Do not look at the light source when the device is on. This may cause PERMANENT RETINAL DAMAGE and may lead to BLINDNESS. Children should only use the device under an adult's supervision.

Assembly

Remove the protective film from the planetarium's parts. Fold the middle and bottom parts of the sphere and fix them so that they take shape as shown in Fig. 2. Put the top, middle, and bottom parts together and fix them [Fig. 2]. Insert the sphere's base and lock it tight [Fig. 3]. Then, mount the sphere on the planetarium's base [Fig. 4].

Getting started

Install the batteries in the remote control (only for Discovery Star Sky P7). Connect the power cable to the device and the DC adapter (not included) via a USB plug and connect to the AC power supply. **Attention!** The device operates from the AC power supply, as the voltage of the computer's USB port is insufficient for the proper operation of the device.

Discovery Star Sky P7 is equipped with a built-in battery and can operate autonomously. Operation time after being fully charged is up to 12 hours in one LED mode and up to 6 hours in three LED mode. Approximate charging time is 3 to 4 hours.

When the battery is fully charged, the indicator [4, Fig. 6] will change from red to green.

Caution! Please remember that mains voltage in most European countries is 220–240V. If you want to use your device in a country with a different mains voltage standard, remember that use of a converter is absolutely necessary.

Using

Choose the right place to project an image: a plain white ceiling or wall will give the best effect. The optimal distance from the astropetarium is approx. 1.5–2m. Place the device on a flat surface. Turn the light off and close the curtains to make the room dark. Wait for 5–10 minutes to let your eyes adjust to the darkness. Turn the power on and choose the desirable projection mode.

To turn the astropetarium on or off, press the button on the device body [1, Fig. 6], or use buttons [1] and [2] on the remote control [Fig. 5] (only for P7).

Press and hold the button on the device body (for 1.5 sec.) to change the light color.

When using the remote control, make sure that it is pointed at the infrared sensor of the astropetarium [2, Fig. 6].

Rotation (available only for P7). To start the rotation of the astropetarium, press the button [9] on the remote control [Fig. 5].

Specifications

	Discovery Star Sky P5	Discovery Star Sky P7
Power supply	MicroUSB 5V, 1A	Li-Ion, 18650 1500 mAh operating time: 6–12h, charging time: 3–4h
Remote control	— + [1 CR2025 battery, not included]	MicroUSB 5V, 1A
Timer	— +	
Projection area	12m ² /130ft ²	

Care and maintenance

The device is suitable for indoor use only. The device is not waterproof. To clean the surface of the device, unplug the device. Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.

Warranty: 2 years. For further details, please visit our web site: www.levenhuk.com/warranty

The manufacturer reserves the right to make changes to the product range and specifications without prior notice.

Caution! Please note that the device is not waterproof. To clean the surface of the device, unplug the device.

Use only a dry, soft cloth for cleaning. Strictly follow the instructions and do not disassemble or drop the device as it may result in a loss of functionality.